


Rear Brake Deflector Install Mercedes Benz AMG GT 2015+

Included Parts:

Left Brake Deflector
Right Brake Deflector
(6) 10" Long Cable Ties

Install Procedure:

1. Securely jack up the vehicle.
2. Remove rear wheel.
3. Loosen and remove two rear brake caliper bolts.
4. Remove rear brake caliper.
5. Secure rear brake caliper to prevent caliper from hanging from the brake hose.
6. Remove rear brake rotor screw.
7. Remove rear brake rotor.
8. Remove 4 front brake dust shield screws.
9. Remove brake dust shield.
10. Cut brake dust shield as shown in the photo below.

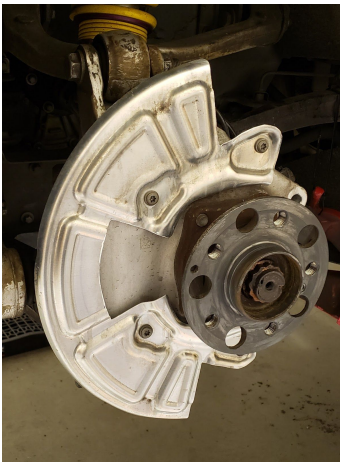

11. Reinstall dust shield.
12. Using the supplied cable ties, secure the deflector to the lower control arm. The furthest outboard tie goes through the metal bracket and through the hole in the lower control arm.



13. Reinstall rotor, caliper and wheel.
14. Repeat for the opposite side.