

Front Brake Deflector Install Mercedes Benz AMG GT 2015+




Included Parts:

- Left Brake Deflector
- Right Brake Deflector
- (2) M12 Nuts
- (2) 10" Long Cable Ties

Install Procedure:

1. Securely jack up vehicle.
2. Remove front wheel.
3. Loosen and remove two front brake caliper bolts.
4. Remove front brake caliper.
5. Secure front brake caliper to prevent caliper from hanging from the brake hose.
6. Remove front brake rotor screw.
7. Remove front brake rotor.
8. Remove 5 front brake dust shield screws.
9. Remove brake dust shield.

10. Cut brake dust shield as shown in the photos below.

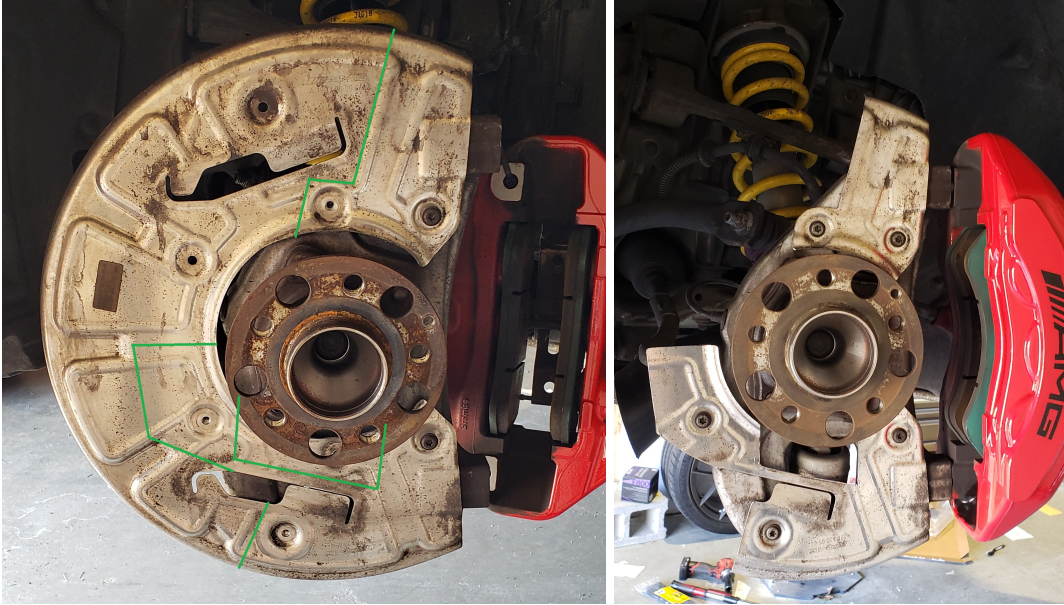

11. Reinstall dust shield.

12. Install deflector using supplied nut to the sway bar end link mounting point. Do not remove the existing nut. Do not overtighten.



13. Using the cable tie, secure the deflector to the lower control arm.



14. Reinstall rotor, caliper and wheel.

15. Repeat for the opposite side.