

CAN Bus Harness

Subaru BRZ / Toyota GR86 2022+




Included Parts:

- 1x CAN Bus Harness
- 1x Self Tapping screw

Install Procedure:

1. Remove the glove box:
Open glove box and remove glove box damper from hinge. Pinch in the sides of the glove box to allow it to drop out further. Pull away from the glovebox hinge to remove.

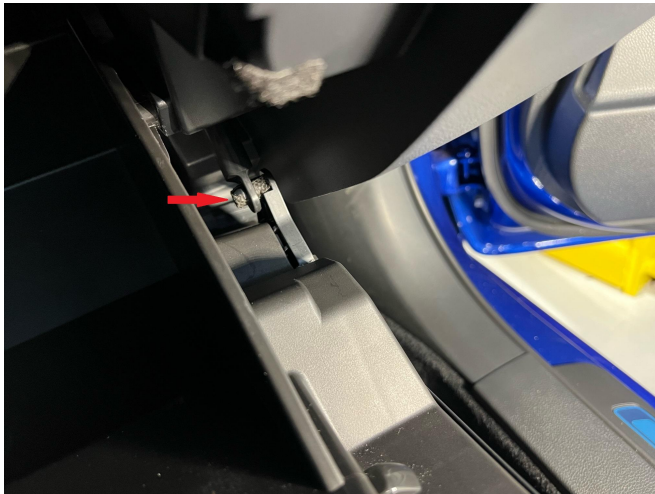

2. Remove dashboard side trim. Pull outward from the location indicated by the arrow



3. Secure OBD port by reusing the screw in the inboard side of the glovebox cavity.



4. Use the provided screw to secure the other side of the OBD port to the glove box



5. Route wiring towards ASC Module
6. Remove connector from the ASC (Active Sound Control) Unit and connect to the CAN Bus Harness. Connect the male side of the CAN Bus Harness to the ASC Unit. Skip this step to deactivate the active sound control.



7. Reassemble interior